


Margins and Blank Areas

Technical Resources—Perforated Metal Standards

The “margin” on a perforated sheet or plate refers to the distance from the edge of the sheet to the first perforation along the same dimension. “No margin” refers to the last row or set of perforations extending off the sheet or plate.

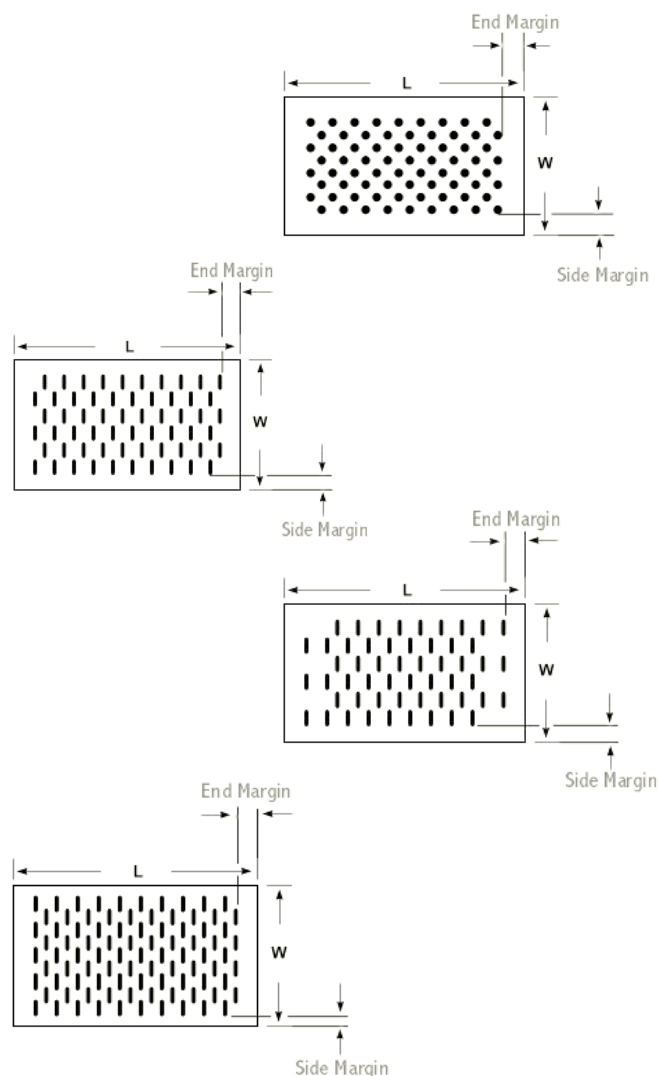

All perforated sheets require blank areas. According to the application, user should give the dimension and location of blank area(s).

